


Indmar

M A R I N E E N G I N E S

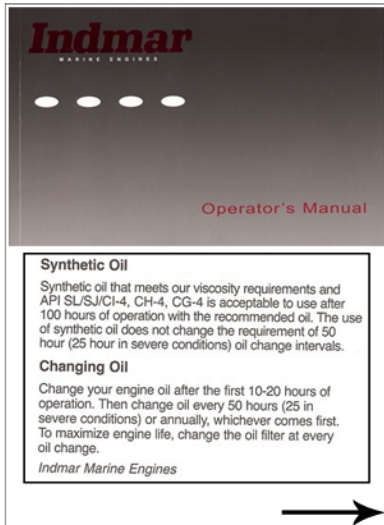

Synthetic Oil

Synthetic oil that meets our viscosity requirements and API SL/SJ/CI-4, CH-4, CG-4 is acceptable to use after 100 hours of operation with the recommended oil. The use of synthetic oil does not change the requirement of 50 hour (25 hour in severe conditions) oil change intervals.

Changing Oil

Change your engine oil after the first 10-20 hours of operation. Then change oil every 50 hours (25 in severe conditions) or annually, whichever comes first. To maximize engine life, change the oil filter at every oil change.

Indmar Marine Engines

CAUTION

Do not overfill. If your oil level is above the full mark on the dipstick, the engine may be damaged.

Indmar uses and recommends Pennzoil Marine 15W-40 Marine Oil API Service SL/SJ/CI-4, CH-4, CG-4 or equivalent. If engine is to be used on conditions below 20° F (-7° C), use Pennzoil Marine SAE 10W-30 API Service SL/SJ/CI-4, CH-4, CG-4 or equivalent.

CAUTION

The use of engine oil other than 15W-40 with an API SJ/CG4 designation can cause engine damage. Damage to your engine caused by the use of improper oils is not covered by your warranty.

Synthetic Oil

Synthetic oil that meets our requirements of 15W40 and API SL/SJ/CI-4, CH-4, CG-4 is acceptable to use after 100 hours of operation with the recommended oil. The use of synthetic oil does not change the requirement of 50 hour oil change intervals.

Changing Oil

Change your engine oil after the first 10-20 hours of operation. Then change oil every 50 hours or annually, whichever comes first. To maximize engine life, change the oil filter at every oil change.

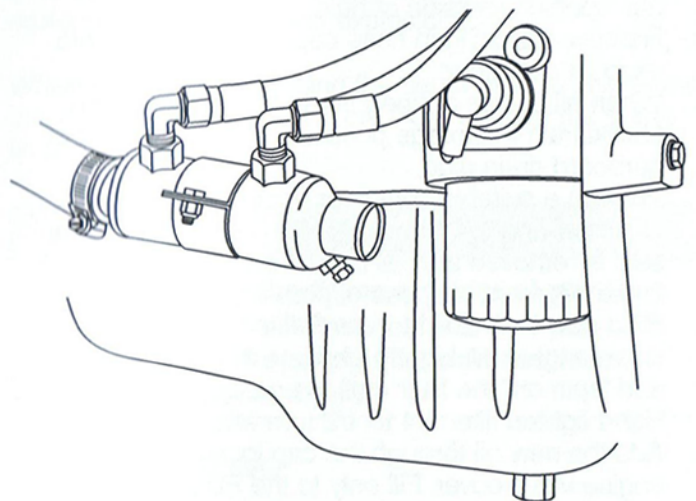


Figure 6.4 – Oil Filter

Indmar recommends all engine maintenance procedures be performed by your dealer, including oil changes. If you must perform the oil change yourself, operate the engine to full operating temperature.